


17-21 Civic Type-R Formula Exhaust System


Use this guide to help you install the Hybrid Racing Formula Exhaust system on the 2017-2021 Civic Type-R.

Written By: Hybrid Racing



Step 1 — Remove engine under panel

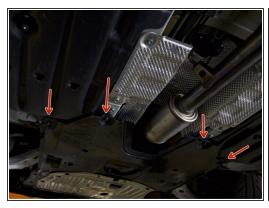


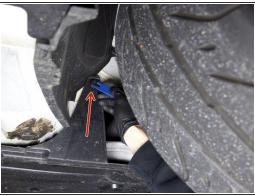



- Begin your installation by unbolting the rear portion of the underbody tray. You do not need to remove the entire plastic tray, but you must remove enough bolts so the panel can be pulled out of the way.
- Using a panel removal tool, remove the clips that hold the inner wheel well panel in place. There
 is one clip in each wheel well.
- Once you have removed all the bolts and clips, you should be able to pull the undertray downward to gain access to the exhaust system front pipe.

Step 2 — Unbolt Exhaust

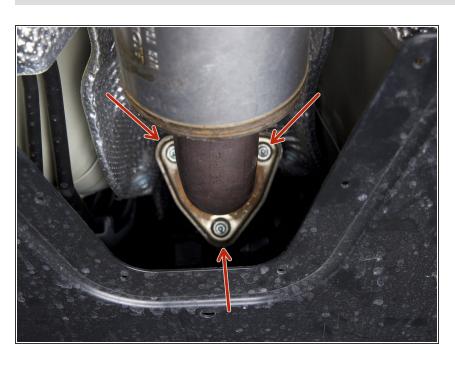


 Remove the exhaust from the front pipe.

Step 3 — Expose Rear Hangers






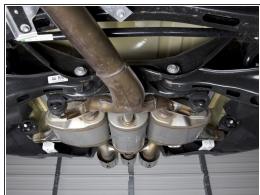


- At the rear of the car, push the felt rear liners inward to expose the rear exhaust hangers.
- No need to remove the clips totally, just push the liners inward. They will pop back in place after the HR exhaust is installed.

Step 4 — Support Exhaust

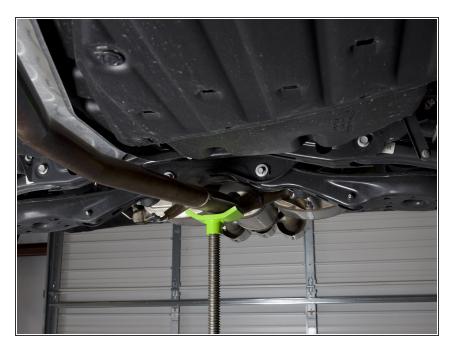

- Use a jack, pole, wooden blocks, or a friend to support the exhaust system.
- ⚠ The next steps will require you to remove the exhaust hangers so be sure you are prepared to hold the system up once they are removed.
- A second set of hands definitely helps.

Step 5 — Remove Rear Hangers

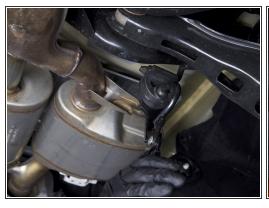





- There are four exhaust hangers on the rear section.
- Remvove the exhaust from the rubber hangers. You can use a little spray lubricant and/or a removal tool to make the job easier.
- Be sure the weight is supported correctly.

Step 6 — Remove Exhaust System







- Disconnect the middle exhaust hanger.
- Pull downward to disconnect the exhaust and remove it from the car.

Step 7 — Remove Bumper Trim







- Before you can install the Hybrid Racing bumper trim, you must remove the factory insert.
- Remove the two outer retaining clips using a trim tool.
- The top section of the trim is held in with molded clips. You can use a flat tipped screw driver to depress the tips and remove the trim from the bumper.
- Once this part is removed, you are ready to begin the installation of the HR exhaust.

Step 8 — Mid Section Install





 Begin by installing the mid-section of the HR exhaust. You can take this section and hang it from the center hanger.

Step 9 — Rear Hanger Brackets







• Locate and install the rear muffler brackets with the supplied hardware. Thread both sides together and be sure to keep them loose so the system can be adjusted once on the car.

Step 10 — Rear Hanger Install







Using the OEM hangers, install the rear HR exhaust section.

Step 11 — Rear Hanger Install







We suggest just installing one hanger through the bushings at a time. Once you have one hanger in each bushing, you can rotate the rubber and get the other one through.

Step 12 — B-Pipe to C-Pipe Connection







- Install the supplied ring gasket onto the rear section of the B-pipe (mid-pipe) already installed on the car.
- Make sure the gasket sits flush against the flange.

Step 13 — B-Pipe to C-Pipe Connection







• Use the supplied hardware and attach the pipes together. Finger tighten the bolts right now.

Step 14 — C-Pipe to Muffler Connection








- Like the previous step, install the ring gasket between the flanges and use the supplied hardware to bolt the exhaust pipes together.
- Do not fully tighten the system.

Step 15 — Front Pipe Adapter

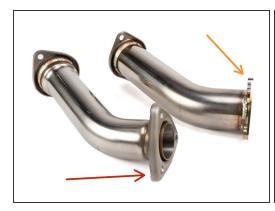





- The Hybrid Racing exhaust includes both the OEM downpipe and aftermarket front pipe connections.
 - The larger 3 inch connection should be used with any aftermarket front pipe. This will not fit with the OEM front pipe.
 - The OEM style connection has a smaller, stamped flange and uses an OEM style gasket. This
 will not fit the aftermarket front pipe.
- Choose the correct pipe for your application and install the gaskets.


Step 16 — Front Pipe Adapter Gasket






On the other end of the connection pipe, install the correct ring gasket.


Step 17 — Install Front Pipe Adapter

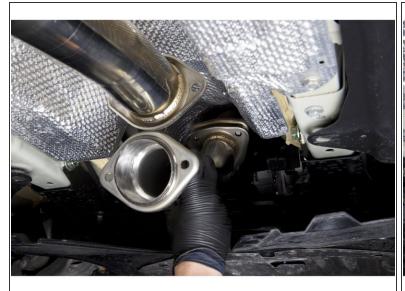

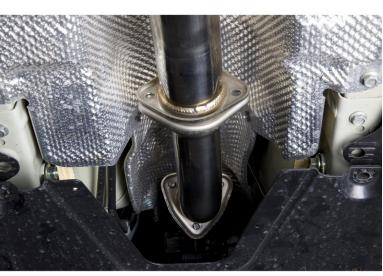

 With both gaskets installed on the front pipe adapter, install it on the car. Be sure to keep the bolts loose for the time being.

Step 18 — Install Front Pipe Adapter

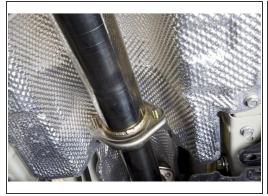





Use the supplied hardware and install the front pipe adapter.

Step 19 — Electronic Valve Prep





- Prepare to install the valve controller by loosening the rear upper muffler heat shield.
- You should only need to remove the LH side bolts. Once they are loose, you should be able to pull it downward.

Step 20 — Connect Exhaust Valve







- Supplied with this system are two wiring harnesses, an electronic control box and two RF controllers.
- The harness with the black connector should be used to plug into the exhaust valve.
- Run the wiring above the heat shield, make sure nothing touches the exhaust pipes.

Step 21 — Tighten Front Section







Tighten the exhaust system, starting at the forward most part.

Step 22 — Install Carbon Panel







 Install the HR carbon rear panel into the bumper using the factory clips. This panel should sit flush at the top and around the bumper seam.

Step 23 — Align Exhaust Tips







- The exhaust tips are designed to slide in/out and the rear muffler can be shifted left/right.
- Install your exhaust tips and position them to your liking.

⚠ If you are using the blown tips (slant cut) the tip should not rest behind the carbon panel. The tip should stick out slightly to avoid the hot gasses from melting the panel.

Step 24 — Tighten Rear Section








Once everything is aligned, tighten the rear muffler hangers and the remaining pipe connections.

Step 25 — Tighten Exhaust Tips





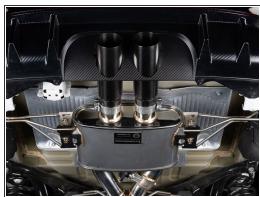

Once the hangers and pipes are tight, tighten the exhaust tips in alignment of the panel.

Step 26 — Electronics Installation







 Begin installing the electronic valve controller by lifting and removing the factory FK8 rear foam tray.

Step 27 — Rear Panel Removal





Pull upward on the rear plastic panel to remove it. Once removed, set aside.

Step 28 — Exhaust Valve Harness








- On the rear bulkhead, locate the rubber grommet in the center. Use your fingers or a flat-tipped pry tool and pull the grommet free.
- With the grommet free, you will need to fish the other end of the valve harness through the hole.
 This can be a little tricky but if you have a friend feed the wire, you can pull it through.
- Pull all but a little slack through the floor and prepare to mount the controller box.

Step 29 — Secure Grommet

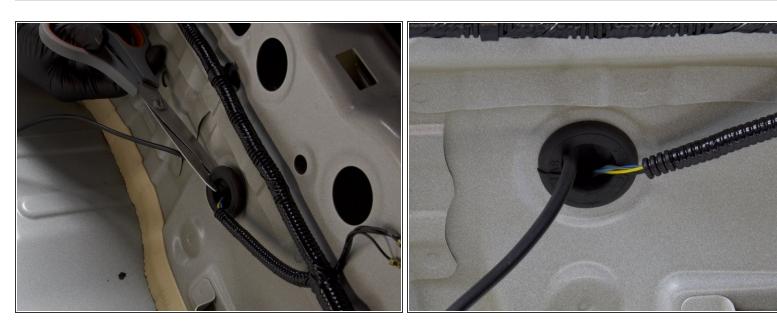

• Use a pair of scissors or knife and cut a slit into the factory grommet. Feed the wire through the slit and re-install the grommet in place.

Step 30 — Valve Controller







- Connect both wiring harnesses to the controller box.
- On the back, remove the tape backing and install the controller under the trunk latch.
- Be sure this position does not prevent the panel from going back in place.
- It is normal for the panel to bulge slightly after being installed. This is fine. It keeps the box from moving or rattling.

Step 31 — Secure Wiring






- Secure the wiring harness that will travel to the front of the cabin. Use the supplied zip ties to tidy
 up the wiring.
- Feed the power harness through the rear trim panel on the driver side.
- For RHD cars, this should route in the opposite direction.

Step 32 — Power Harness Install





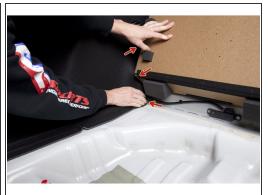

- Fold the rear seat down to give you access to the panels.
- You are free to route the wiring however you like. However the next few steps are how we suggest doing it.
- Feed the wire though the rear panel and then under the corner of the rear seat.

Step 33 — Power Harness Install







Route the power harness around the corner of the rear seat and down through the rear panel.
 Conceal the wire as best as you can.

Step 34 — Power Harness Install







- Route the harness through the bottom section of the seat.
- From the seat, run the wiring under the side sill. You can lift the panel upward to make it easier.

Step 35 — Power Harness Install







 Route the harness under the panels along the sill. You can tuck the wiring under the panels, under the seat belt mount.

Step 36 — Power Harness Install



- Gently pull upward on the sill cover.
- Lay the power harness along the top of the carpet and make sure it reaches all the way to the fuse box.

Step 37 — Remove Kick Panel







- Pull gently outward on the kick panel to make it easier to access the under dash fuse box.
- Route the wiring harness behind the kick panel and upwards toward the fuse box.

Step 38 — Connect Power Harness






Pull outward on the bottom section of the lower dash panel. It should pop outward allowing you
clear access to the fuse box and grounding location.

Step 39 — Connect Power Harness



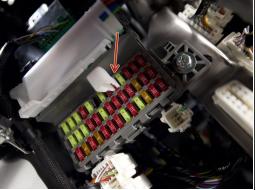



- Locate fuse location 35, 10amp SRS system. We will use this location to power the EVC box. It will have 12v when the key is on, but 0v when the key is off.
- This does not affect the SRS system because the fuse is still present.
- Use the OEM fuse puller and remove fuse 35 from the underdash fuse box.
- Insert the fuse tap into the fusebox. Secure the remaining wiring and reinstall the kick panel.

Step 40 — Ground Harness








- Behind the lower dash panel, there is a 10mm bolt that you can use to ground the EVC harness.
- Remove the bolt, insert the bolt through the eyelet and reinstall the bolt.
- You can now reinstall all panels and prepare to test the system.

Step 41 — Test Valve System



- On the key FOB, there are three buttons.
- Press OFF to fully close valve.
- Press ON to fully open valve.
- Press AUTO to step the valve open. You must press OFF first to close it. Pressing this button will allow the valve the step open slightly. You can continue to press AUTO to increase the step. Once you have pressed it enough times, the valve will be fully open. Press OFF to reset the system.
- ⚠ Be sure to test the valve operation before starting the vehicle. The EVC box will beep when the buttons are pressed. You should also hear the valve open and close.

Step 42 — Check For Leaks

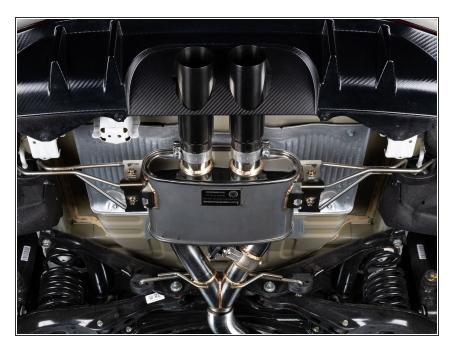

- Start the vehicle and check for exhaust leaks. Once you have tightened the system and confirmed it is not leaking you are now able to actuate the valve and hear the audible change.
- You can now complete the installation by replacing all panels and pieces that were removed for the installation.
- For support, please call 225-932-9588 or email support@hybridracing.com