





Hybrid Racing Adjustable K-Series Thermostat Housing

Written By: Hybrid Racing



Step 1 — Remove OEM Neck

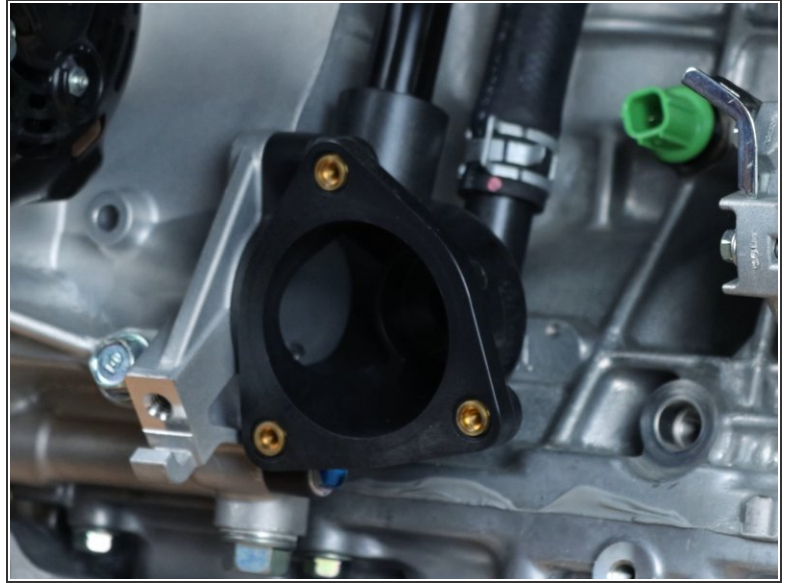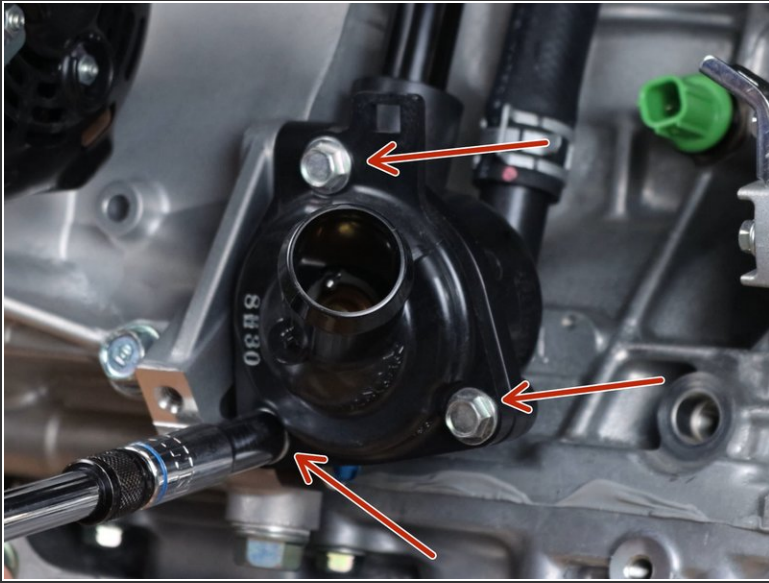

- Begin the installation by removing the factory plastic thermostat neck.
- Remove the three 10mm bolts.

⚠ Drain all of the coolant out of the system before removing the thermostat. If you haven't, it will leak out once you remove this part.

Step 2 — Install Thermostat



- You must remove the pre-installed threaded plug before you can slide on the mounting bracket.
- Once removed, slide on the mounting bracket and align it with the OEM thermostat housing.
- The mounting bracket should align with the logo on top.

Step 3 — Install Thermostat



- Thread the supplied hose adapter and make sure it is tight.
- You can use a 1 1/2" adjustable wrench, large AN wrench or a pair of adjustable pliers. We show the most common method since these tools are commonly found.

⚠ Be sure not to mar the neck if you use pliers. Cover it with a shop towel first.



- ⓘ If you want to run a Honda fan sensor in this product, now is the time to install it. The process is the same.

Step 4 — Install Thermostat



- Once you have tighten everything, you can now install the thermostat neck onto the OEM housing.
- Use the supplied hardware.

Step 5 — Install Complete

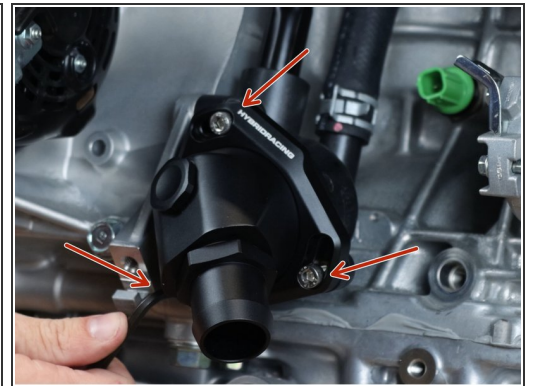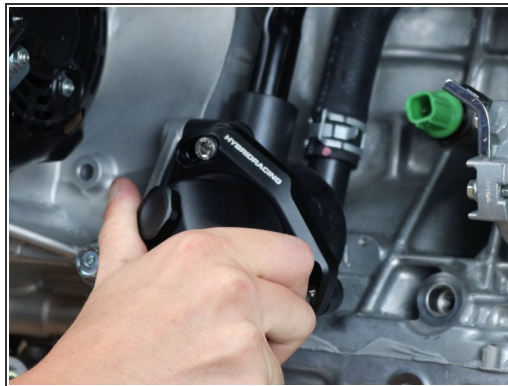

- Position the housing as necessary. Once you have chosen the location, you can tighten all bolts to 7.2ft lbs.
- ❗ Fill the cooling system and confirm there are no leaks.